



## **Ultrasonic wave dishwasher**



CHEF MAX

# User Manual

## Dear users:

Please read this instruction manual carefully before using to help you use and maintain the dishwasher more effectively.

Please save it for future reference and give this instruction manual randomly to subsequent users if you need.

This manual consists of: safety instructions, installation instructions, operation instructions, fault analysis and other parts.

Self-treatment of common faults:

When the dishwasher fails, you can help yourself deal with some common failures by consulting the instructions on failure analysis in this instruction manual. If there is a fault that you cannot solve by yourself, please seek professional help.

**Tips: The factory may continuously improve the product according to the actual situation. If there is any inconsistency with this manual, please refer to the actual product**

---

## Catalogue

Before using.....	1
Dishwasher Introduction.....	3-4
Detailed diagram of ultrasonic dishwasher.....	5-6
Installation steps.....	7-13
After-sales service.....	14



## Easy and convenient operation

Tableware, vegetables, fruits, etc. do not need to be arranged deliberately. Tableware of any shape, goblets, pots, bottles, pots, etc., regardless of the depth, are not restricted and can be washed directly.

The user's hands do not need to touch the oil and water, which can avoid damage to the skin, and can also prevent the smell of oil and water from remaining on the hands.

## Product specifications


1. Stainless steel plate: high quality industrial stainless steel plate is used for the vibrator.
2. Vibration mode: bottom attached.
3. Control mode: ultrasonic generator.
4. Input power supply: AC220  $\pm$  10% 50Hz
5. Sewage system: 40 # stainless steel industrial high- quality round pipe.



## Ultrasonic Installation Instructions

Touch screen ultrasonic detailed diagram:

触屏款超声波详解图 ▶

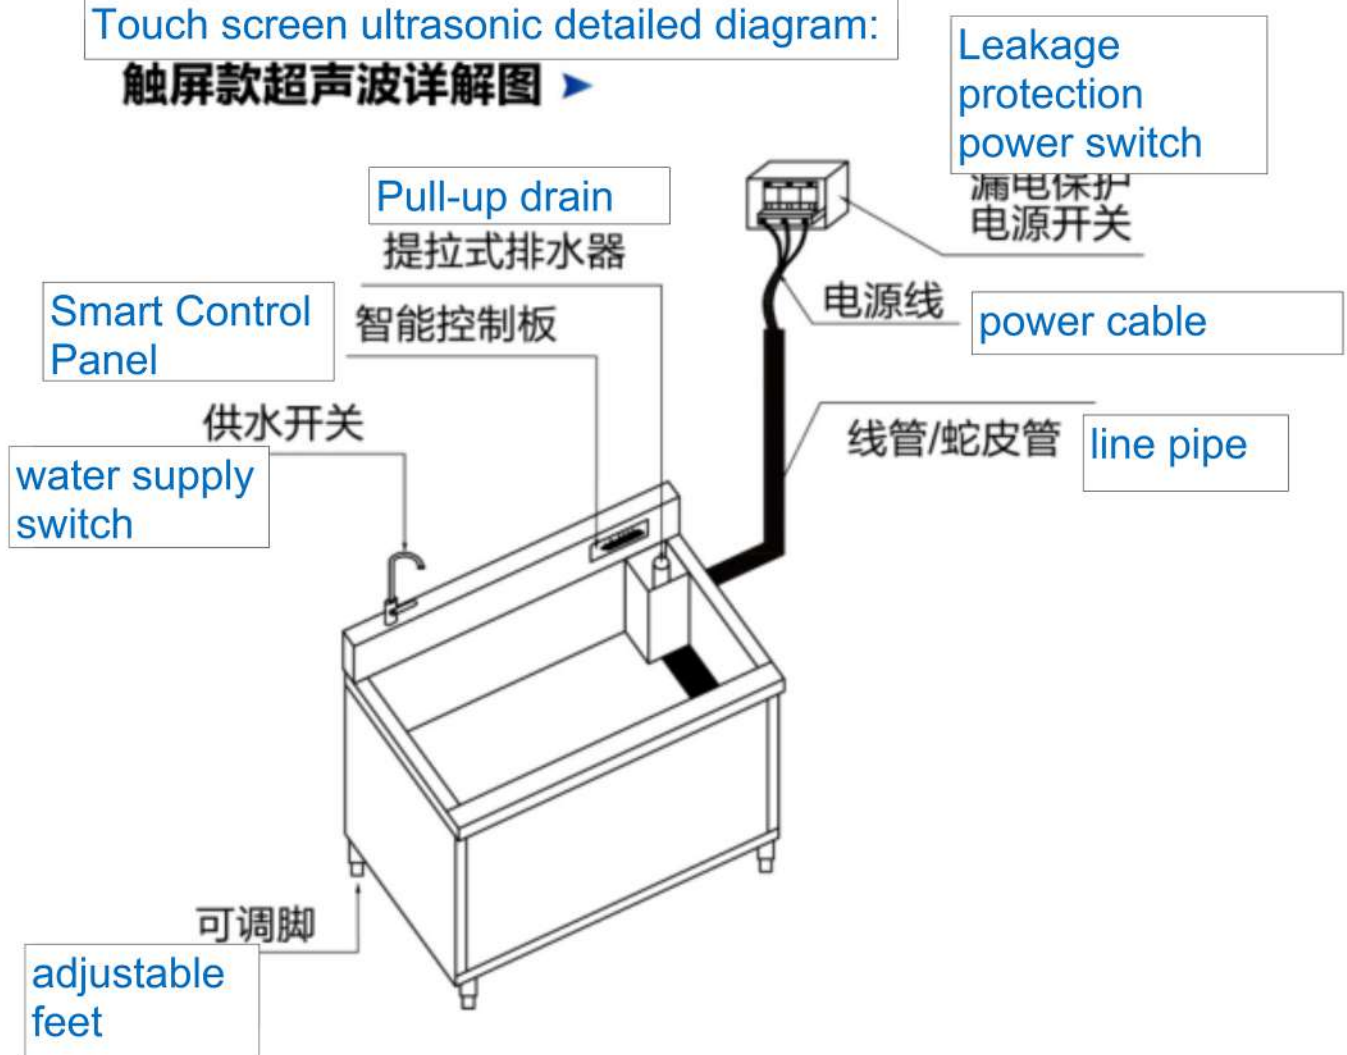




CHEF MAX

# User Manual

Button model ultrasonic detailed diagram:


按键款超声波详解图 ▶

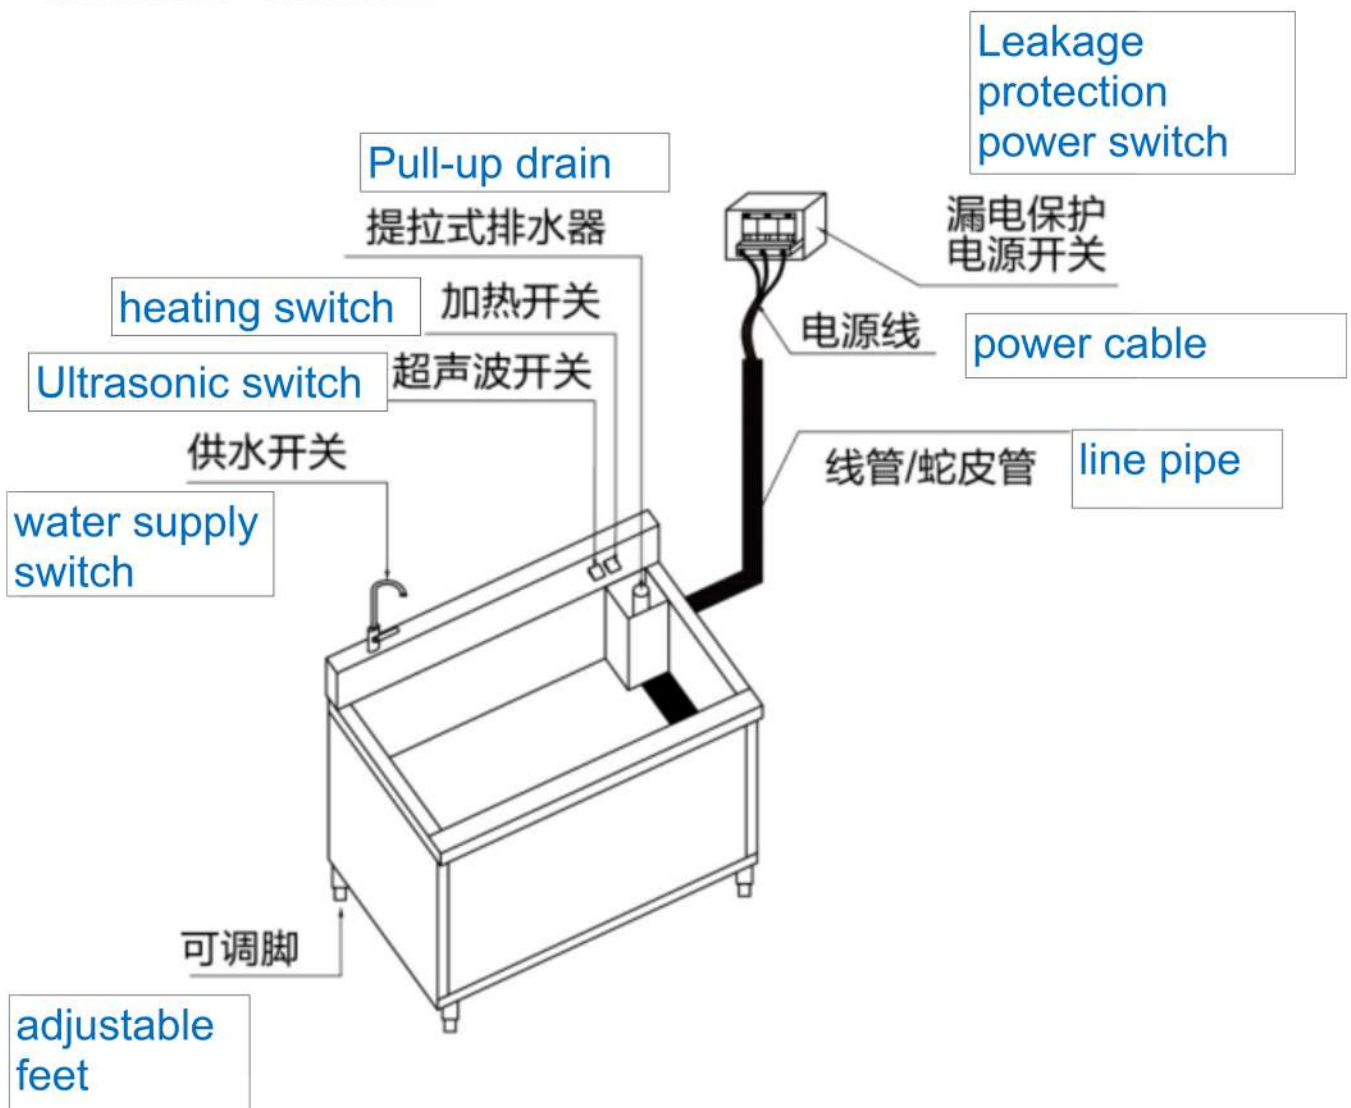

## Installation Steps:

### Step 1:


(图一)

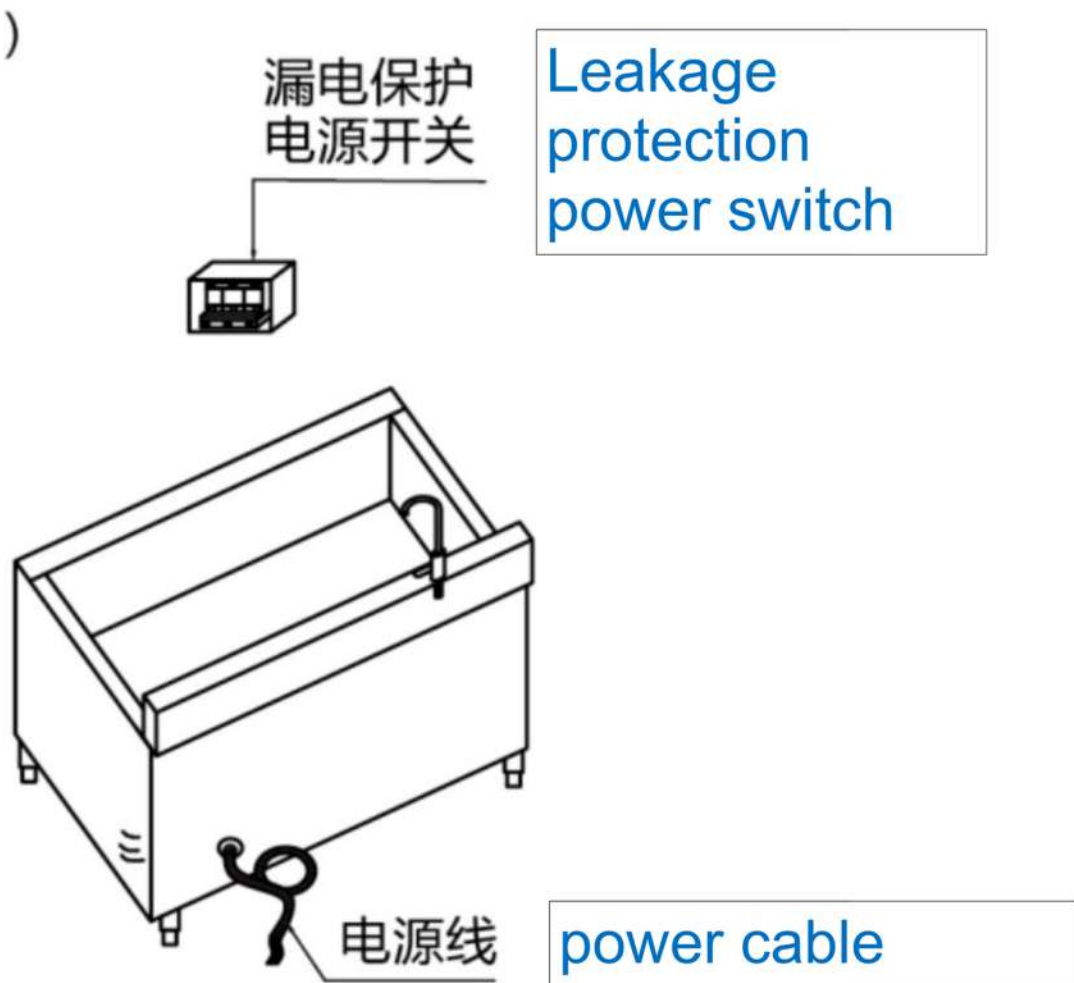

1: Put the power cord into the wire tube or the snake skin tube and connect it to the leakage protection power switch respectively. The power wires are marked as live wire, neutral wire and ground wire respectively, and correctly connect to the corresponding interface of the leakage protection power switch. ( as the picture )

## Step 2:

(图二)

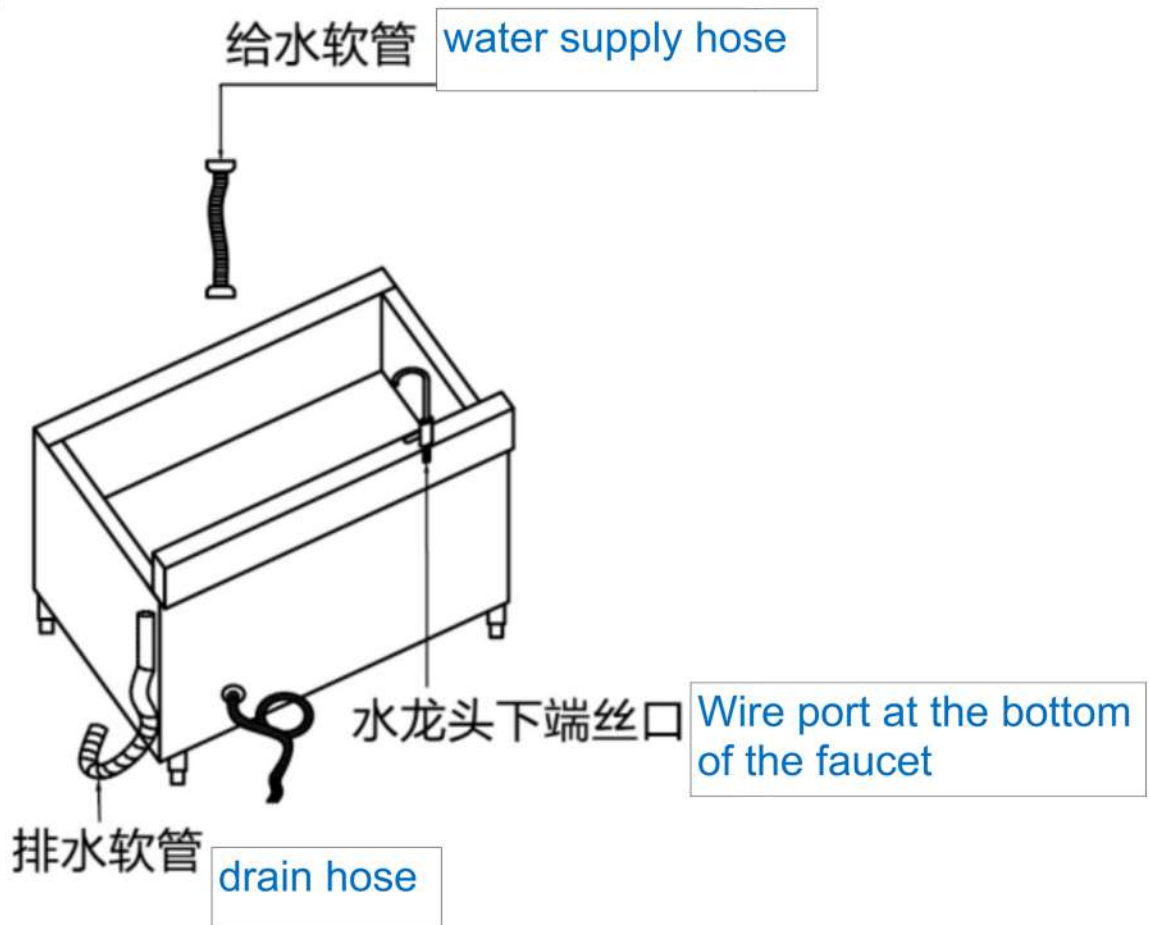

2: Connect the water supply hose to the wire port at the lower end of the faucet and the reserved water supply position. Connect the drain hose to the reserved drain port (as shown in Figure 2)




**Step 3:**

(图三)

Turn on the water supply switch

打开供水开关

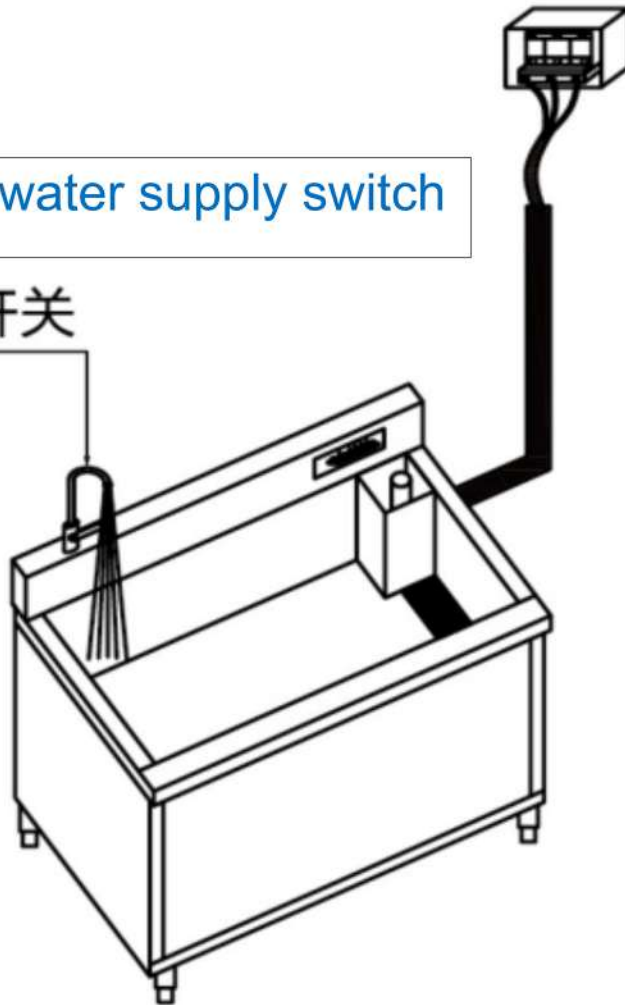


3: Turn on the water supply switch and inject water at a depth of about 25cm (as shown in Figure 3)

**Step 4:**

(图四)

打开漏电保护电源开关

Turn on the power switch of leakage protection

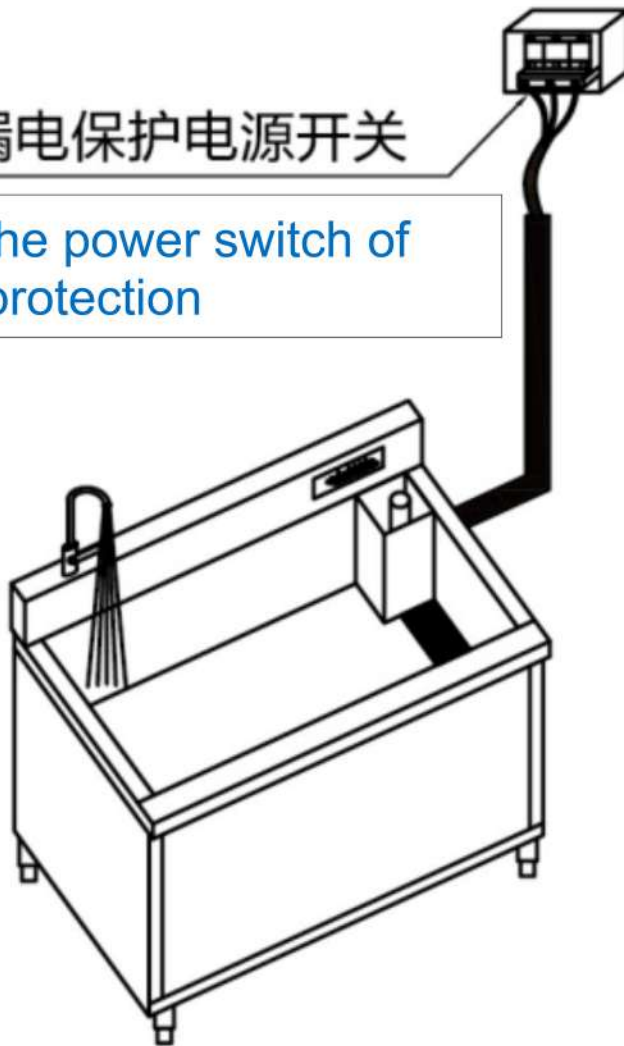

4: Turn on the leakage protection switch and turn on the power supply  
(as shown in Figure 4)




CHEF MAX

# User Manual

## Step 5:

(图五)

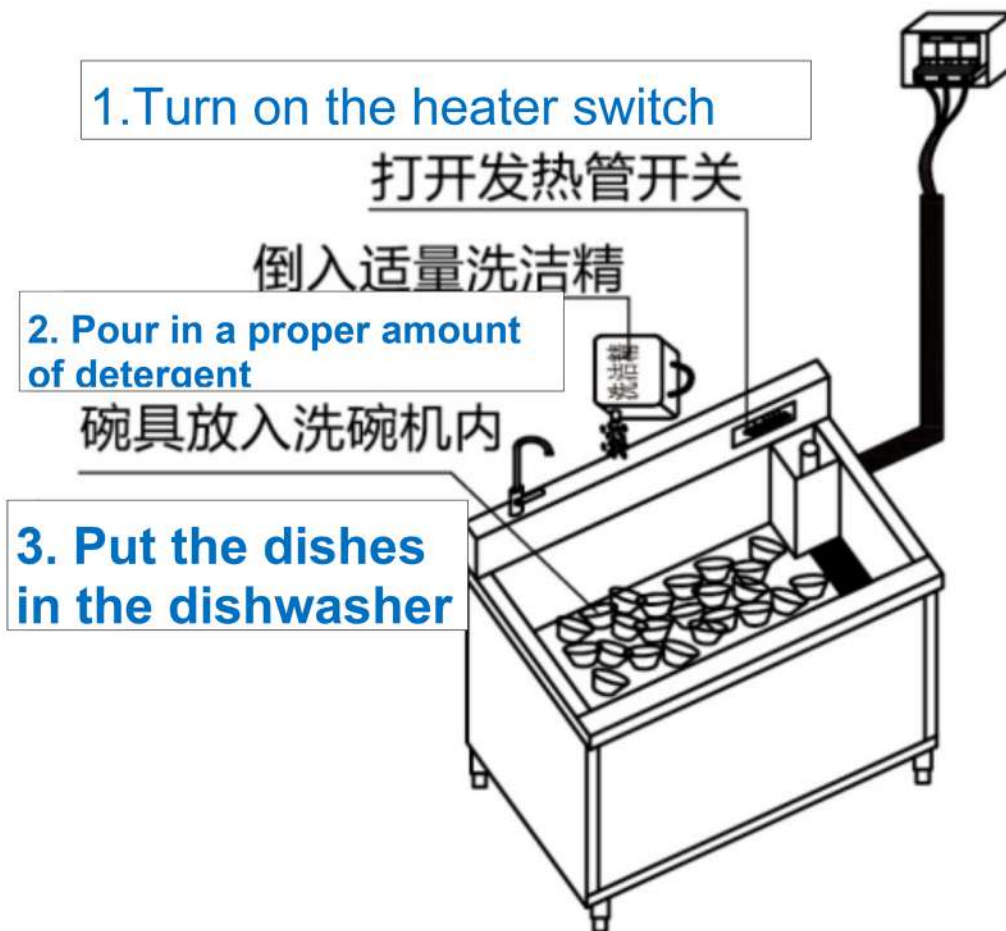


5: Press the heating button on the intelligent control panel, and the heating tube starts to work. Pour in an appropriate amount of detergent, and put dishes and other tableware into the dishwasher (as shown in Figure 5)

## Step 6:

(图四)


打开漏电保护电源开关

Turn on the power switch of leakage protection

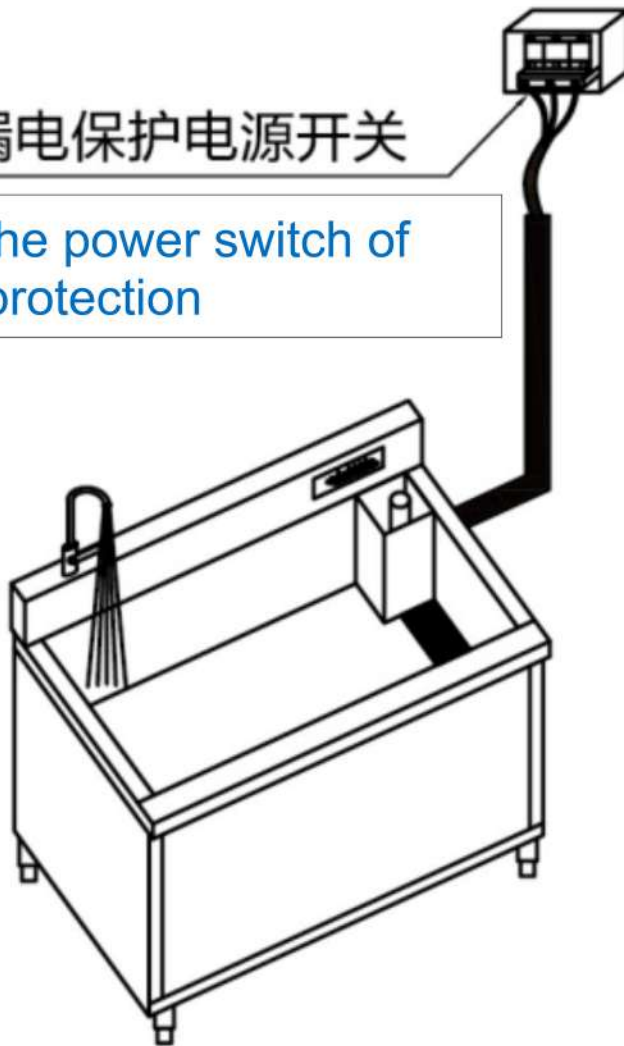

6: When using, press the ultrasonic button on the intelligent control panel, and the ultrasonic starts to work. At this time, there will be a sound of wheezing, which indicates that the bowls are working normally. After putting them into the ultrasonic dishwasher for 10 minutes, take them out directly and rinse them with water. (as shown in Figure 6)

## Step 7:

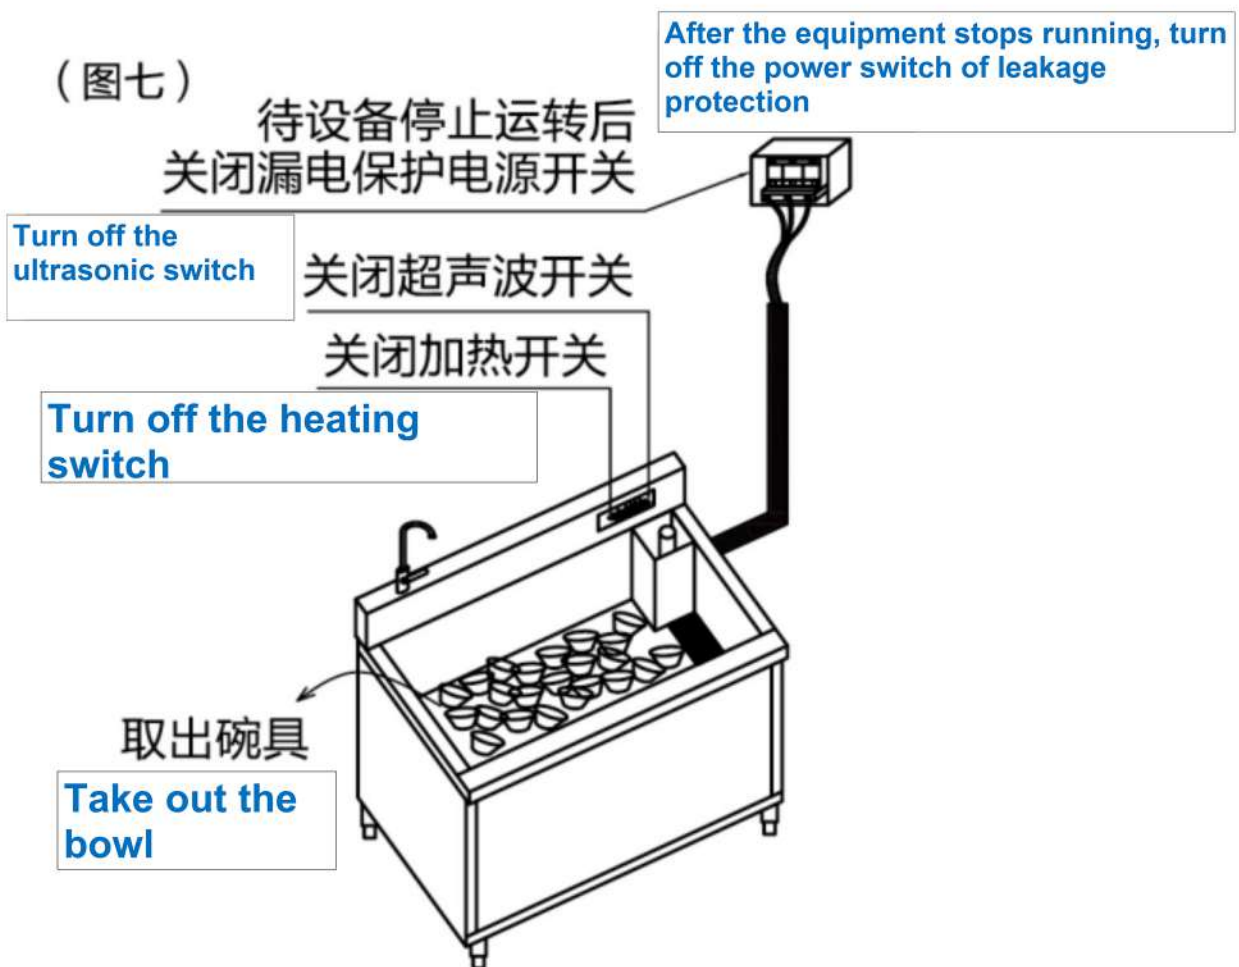

7: After use, press the heating key and ultrasonic key on the intelligent control panel. At this time, the heating tube and ultrasonic stop working. After the equipment stops running, turn off the leakage protection switch. Finally, take out the bowl (as shown in Figure 7)



CHEF MAX

# User Manual

## After-sale service:

Dear users:

Thank you for using our products. Our company will provide services for you with warranty cards and invoices in accordance with the relevant provisions of the consumer rights and interests protection law. A 12-month warranty period shall be provided from the date of purchase (subject to the date in the invoice). During the warranty period, under normal operation and use, if the equipment is defective or has parts with inconsistent quality, the company shall be responsible for the spare parts and labor services to be replaced free of charge.

### **The following situations are not included in the scope of free service:**

1. The user damaged the machine due to improper transportation, installation and use of pipes
2. The user failed to provide the power supply voltage and steam pressure required by the technical parameters of the machine, resulting in the damage of relevant components.
3. Dismantle the product by oneself, tamper with or change the mechanical and electrical structures at will, causing damage;
4. Improper operation, cleaning and maintenance by the user, resulting in machine damage
5. Machine damage caused by force majeure, such as abnormal voltage, fire, building collapse, lightning strikes, floods and other natural disasters, and damage caused by pests such as rats
6. Not used according to the precautions in the manual
7. Consumables and consumable parts;
8. Altered invoice or no purchase invoice and warranty card.